

FOR 3" FLOW SENSOR, DIMENSION 'A' MINIMUM 30" **DIMENSION 'B' MINIMUM 15"**

Upon completion of the physical installation of the flow sensor, complete the wiring connection from the flow sensor to the DX2 controller by following the procedure below.

1. TURN THE POWER OFF AT THE CONTROLLER

- 2. At the Flow Sensor:

 - Connect the **BLACK** wire of the Flow Sensor to the **BLACK** wire of the "**EV-CAB-SEN**", sensor cable. Connect the **WHITE** wire of the Flow Sensor to the **WHITE** wire of the "**EV-CAB-SEN**", sensor cable.
 - *Use the weatherproof connectors provided with the Flow Sensor to make the connection.
- 3. At the controller:
 - Connect BLACK wire of "EV-CAB-SEN" to "INPUT 1-" of the SENSOR TERMINAL BOARD (PC-DX2ST). Connect WHITE wire of "EV-CAB-SEN" to "INPUT 1+" of the SENSOR TERMINAL BOARD (PC-DX2ST).
- 4. Turn **POWER ON** at the Controller.
- 5. Set the Rain Master "K" and "OFFSET" values for the Flow Sensor at the controller based on the type and size of the Flow Sensor installed.

REFER TO THE TABLE PROVIDED WITH THE FLOW SENSOR FOR CORRECT "K" AND "OFFSET" FOR YOUR APPLICATION.