



PREPARE EV-CAB-COMM CABLE

1. REMOVE OUTER INSULATION

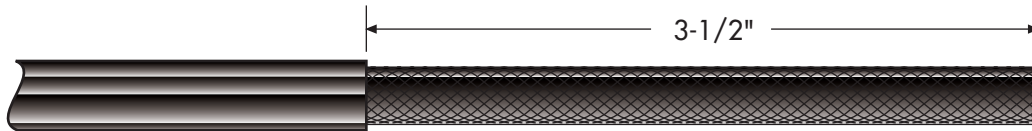


2. CUT BRAID BACK

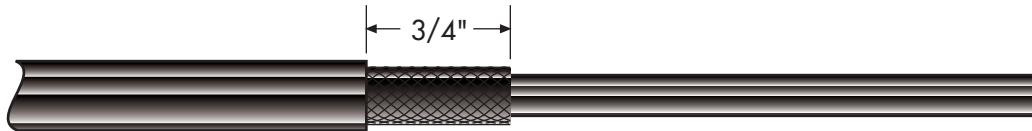


3. FOLD BRAID BACK OVER OUTER JACKET



4. REMOVE INNER INSULATION

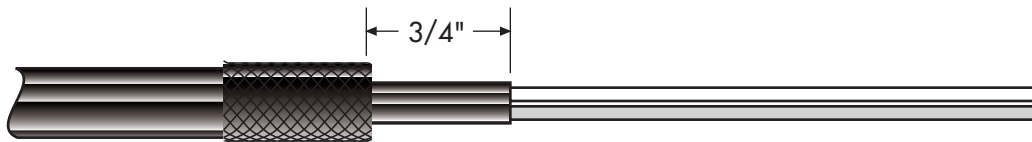

5. STRIP WIRE



SECURE AND CONNECT AS SHOWN

